

Fuel Filter Fitment - General Guidelines.

INSTALLATION GUIDELINES FOR AN ACDELCO IN-LINE FUEL FILTER*



Example of ACDelco In-Line Fuel Filter

- 1. Always wear appropriate Personal Protective Equipment (eyes, skin, respiratory).
- 2. Locate the vehicle's fuel filter. It is usually found beneath the vehicle close to the fuel tank.
- 3. De-pressurise the fuel system using vehicle Manufacturer's recommendations.
- 4. Disconnect the battery to in accordance with vehicle Manufacturer's recommendations to minimise the risk of electrical sparks.
- 5. Remove the filter from its mountings using appropriate tools.
- 6. Disconnect fuel lines using vehicle Manufacturer's recommendations. Use a drip container to minimise spills. Wipe away spilled fuel to minimise health/fire hazards.
- 7. Attach the new fuel filter ensuring its position corresponds to the direction of flow. This is indicated by an arrow or "inlet/outlet" stamped on the filter itself.
- 8. Install mountings using the reverse method of removal.
- 9. Reconnect the battery to in accordance with vehicle Manufacturer's recommendations.
- 10. Ensure the fuel system has fully primed in accordance with your vehicle Manufacturer's recommendations before starting the engine. Start engine and check for leaks.
 - *Fuel filter removal and installation can differ greatly between vehicles, so you must refer to your vehicle Manufacturer's service manual for vehicle specific instructions.