


S-Boots

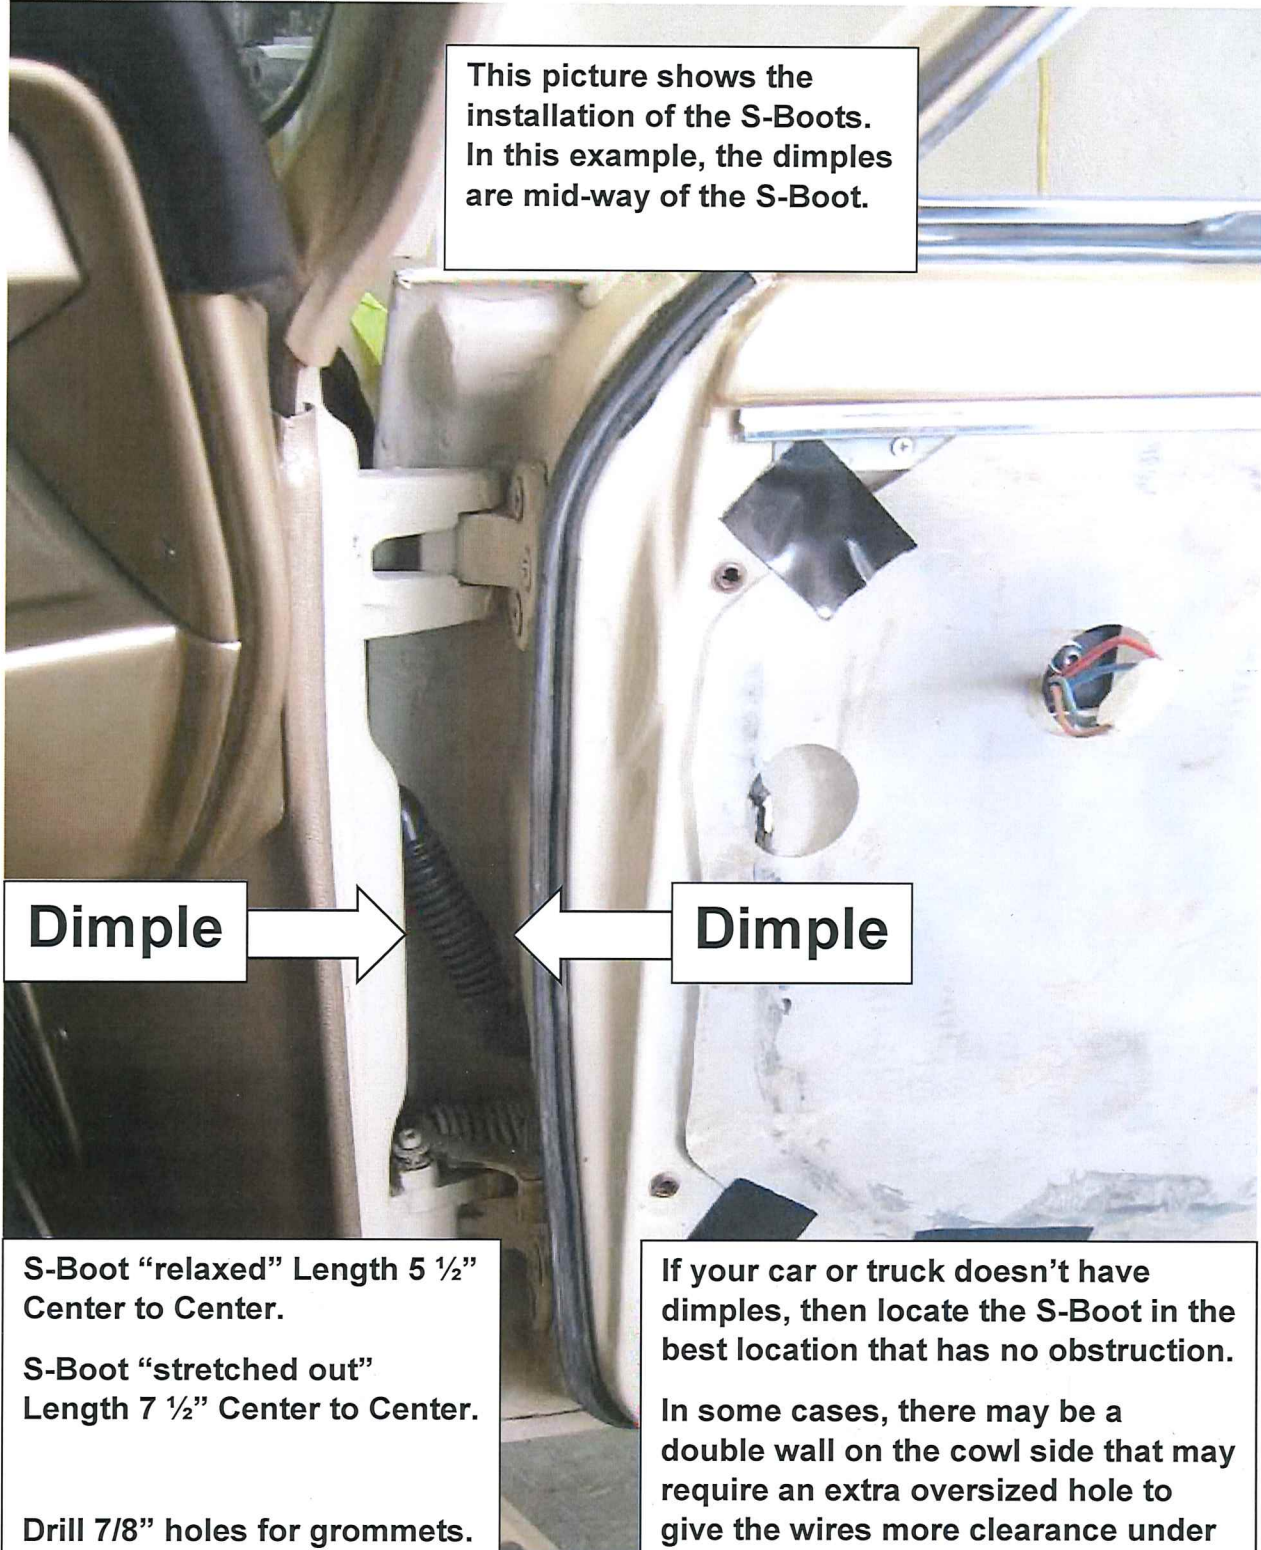

This picture shows the installation of the S-Boots. In this example, the dimples are mid-way of the S-Boot.

Dimple

Dimple

**S-Boot "relaxed" Length 5 ½"
Center to Center.**

**S-Boot "stretched out"
Length 7 ½" Center to Center.**

Drill 7/8" holes for grommets.

We suggest using a Vari-Bit.

If your car or truck doesn't have dimples, then locate the S-Boot in the best location that has no obstruction.

In some cases, there may be a double wall on the cowl side that may require an extra oversized hole to give the wires more clearance under the dash behind the kick panel.

In most cases, the S-Boot will work best if it is stood up vertically.